



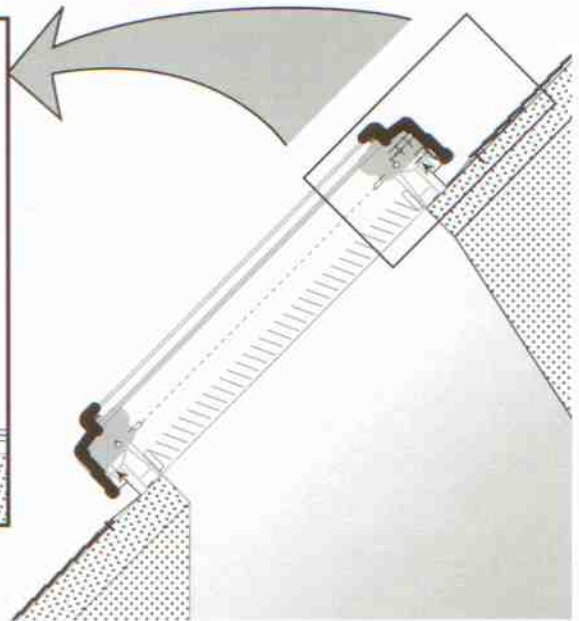

SELF-FLASHING SKYLIGHTS INSTALLATION INSTRUCTIONS

STEPS

- 1 THE BOTTOM FLANGE SHOULD BE PLACED ON TOP OF THE SHINGLES AS THE ROOFING PROGRESSES UP THE SLOPE, DURING CONSTRUCTION.
- 2 BOTH SIDES AND THE TOP FLANGE SHOULD BE PLACED UNDER THE SHINGLES. WE ALSO RECOMMEND THAT YOU ADD A WIDE STRIP (MINIMUM 10") OF ALUMINUM FLASHING MATERIAL ON TOP OF THE TOP FLANGE, WHICH WILL ALSO REMAIN UNDER THE ROW OF SHINGLES. THIS ACTS AS HEAD FLASHING, AND WILL PROVIDE BETTER WATER-PROOFING UNDER SEVERE CONDITIONS.

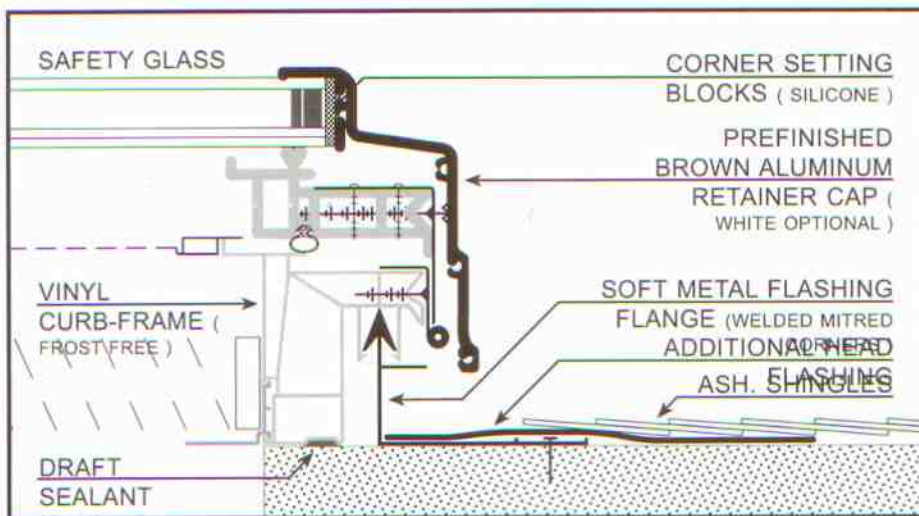

- 3 ALL SURFACES IN CONTACT (I.E., SHEATHING, FLASHING, AND SHINGLES) SHOULD BE BONDED TO ONE ANOTHER WITH TAR OR ROOF CEMENT. NOT AS A DRAFT SEALANT, BEFORE THE SKYLIGHT IS PLACED OVER THE ROOF OPENING, THE PVC INNER/CURB FRAME SHOULD BE CAULKED IN THE GROOVE PROVIDED. THIS IS A MUST, TO PREVENT AIR LEAKAGE.

SINCE WE ARE ALWAYS LOOKING FOR WAYS TO IMPROVE OUR PRODUCTS, DAYLITER INDUSTRIES RESERVES THE RIGHT TO CHANGE ANY DESIGN OR PROCEDURE WITHOUT PRIOR NOTICE.